

## User instructions – FrameFit Perko closer replacement with the FrameFit Perko plug.

Unbox the Framefit Perko plug and check the contents.


Each box should contain the following:

- 1 x Intumescent wrapped dowel
- 2 x Cover plates with intumescent pads
- 2 x Lengths of thin dowel
- 8 x Screws for fixing cover plates.



\* Carefully remove all screws from the Perko closer.

Remove the closer and recycle as appropriate. The closer is sprung, so please take precautions and wear suitable protective clothing.

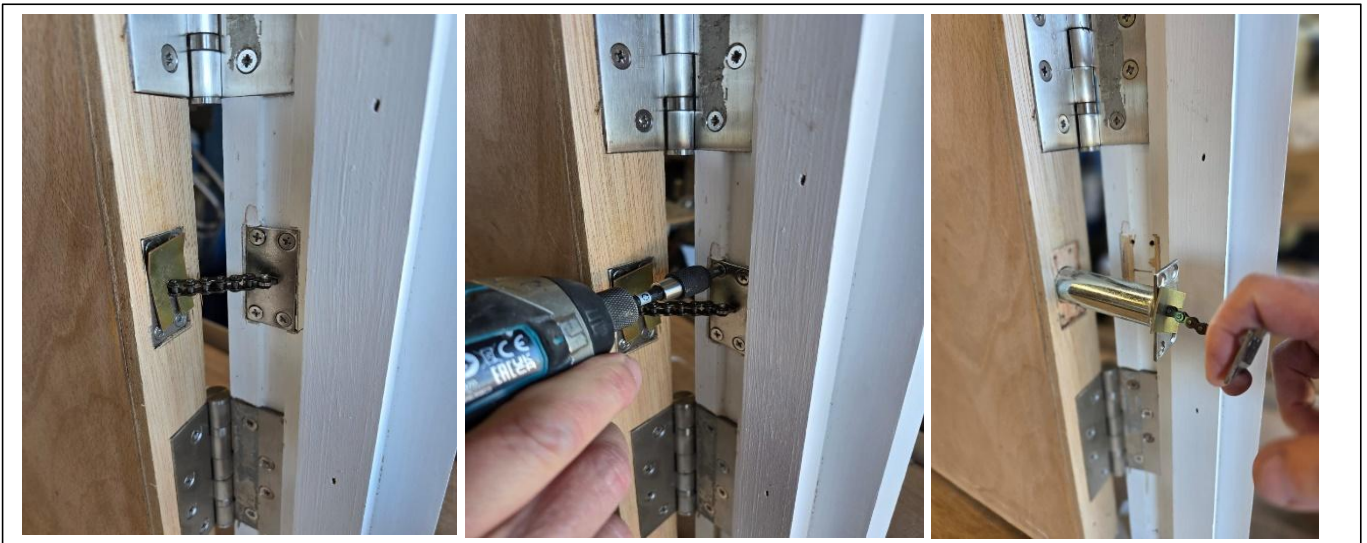


\*Insert the intumescent covered dowel into the Perko closer hole and mark the correct length and cut to size. Once installed, the intumescent dowel should be flush with the finished hole, see image.



\*Using Intumescent mastic, apply this into the hole before inserting the cut to size dowel.

Once the dowel has been pushed into place, wipe off any excess mastic.

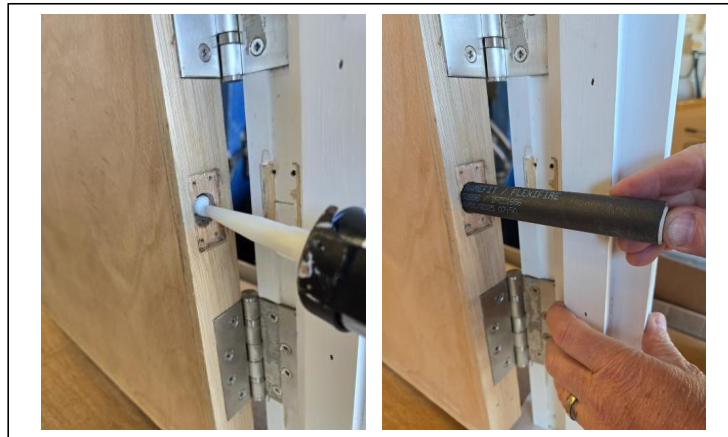

\*Using the supplied thin dowel plugs, push these into the existing screw holes, this will require a hammer to tap into place. Cut off any excess using a chisel.

\*Remove the adhesive backing from the intumescent pads and adhere to the back of the plates. Screw the brass plates into position using the supplied screws, the installation of the Perko Plug is now complete

